

Thank you for the purchase of our refillable inkjet cartridges. All cartridges have been tested prior to shipment. If you have any questions please feel free to call us at 1-800-683-5752

PLEASE NOTE :

The ink will stain anything it comes in contact with. We highly suggest using gloves when handling the ink. If ink comes in contact with your skin wash with soap and water. Ink may stain skin for a short period of time. WE also suggest putting cardboard under the printer while filling the cartridges

Instruction for Epson 4000, 7600, 9600, 4400, 7400, 9400, 7800, 9800, 4800, 4450, 4880, 7450, 9450, 7880, 9880 refillable cartridge

Step 1: Insert the cartridges with ink into printer according to the colors. **DO NOT LOWER INK LEVER YET.**

Step 2: Using the supplies funnel fill the colored cartridges with our pink Cleaning / line flush solution. Fill the photo black cartridge with our dye black go ahead and lower ink levers



Fill cartridges no more than 3/4 full

Step 3: Do "POWER CLEANING" from the printer. Details are as below: Menu>> MAINTENANCE >> POWER CLEANING. This takes about 10 minutes. **If you were previously using aftermarket ink do this twice**

Step 4: Open the front cover of printer to check for air in the line. If there is no air in the line you can start printing. If you see air in the line please wait 5 minutes then repeat step 3

Step 5: The printer is ready to start printing

Notice:

Please keep ink levels at least half full. But be careful not to overfill. Don't exceed the max fill line on the side of the cartridge. If the ink does run out and you get air in the line you'll have to do multiple power cleanings to purge the air from the system.



Place cartridge on a flat surface being careful not to spill ink from the air hole. Place chip resetter against the side of the chip. The light will flash red then turn solid green. If the chip turns red that means the chip has been damaged. Please contact us for a replacement 1-800-683-5752